

## Q.

## How to Download Startup Screen to HMI?

After the BMP picture file used as startup screen is downloaded to HMI, the HMI will reboot. The picture will show on HMI during boot-up before entering the project. Startup screen isn't compatible with BMP 32bit color.



There are two ways to download startup screen to HMI:

Way 1 Download using Utility Manager

Step 1. Launch Utility Manager.

Step 2. Select [Download].



Step 3. Select a BMP file that matches the HMI screen size. Ex: Use an 800 x



480 file or smaller one for eMT3070.

- **Step 4.** Download the picture file by using Ethernet or by connecting a USB cable. Designate an IP address when Ethernet is used.
- **Step 5.** Click [Download]. The picture should show during HMI reboot when

Download						<b></b>
Firmware						
Project						
RW						
RW_A						
						23
Data log						
Step 3						
Startup screen	C:\picture_80	0-480.bmp				Browse
Connection	et 🔘	USB cable				
IP	192.168.2.28	•				
Reboot HMI after do	wnload	Synchronize HMI Reset data log	dock with PC	Reset	t event log	
Delete startup screer	1			Ste	ep 5	
Port No. Setting	Password :	*****	Mask		Download	Exit

it is successfully downloaded.

Way 2 Download using EasyBuilder Pro

**Step 1.** Launch EasyBuilder Pro and click [Tools] > [Download].



www.weintek.com



- Step 2. Select a BMP file that matches the HMI screen size. Ex: Use an 800 x 480 file or smaller one for eMT3070.
- **Step 3.** Download the picture file by using Ethernet or by connecting a USB cable. Designate an IP address when Ethernet is selected.
- **Step 4.** Click [Download]. The picture should show during HMI reboot when it is successfully downloaded.

tep3		
🖲 Ethernet 👘 USB cable	Password/Port no. of download/upload : [	Settings
4 IP HMI Name		t
IP: 192.168.2.10	•	
	What	at's my IP ?
Runtime Font files		
Runtime Font files Necessary if update runtime or execu	te download first time.	
Runtime     Font files     Necessary if update runtime or execu tep2     Use upor defined startum screen	te download first time.	
Runtime      Font files     Necessary if update runtime or execu     tep2     Use user-defined startup screen     File location : c:\nicture 86	te download first time.	Browse
Runtime     Font files     Necessary if update runtime or executep2     Use user-defined startup screen     File location : c:\picture_80	te download first time.	Browse
Runtime     Font files     Necessary if update runtime or executep2     Use user-defined startup screen     File location : c:\picture_80     Use system settings file	te download first time.	Browse
Runtime Font files     Necessary if update runtime or executep2     Use user-defined startup screen     File location : c:\picture_8(     Use system settings file	ute download first time.	Browse
Runtime     Font files     Necessary if update runtime or executep2      Use user-defined startup screen     File location : c:\picture_8(      Use system settings file      Synchronize HMI clock with PC	00-480.bmp	Browse
Runtime     Font files     Necessary if update runtime or executep2      Use user-defined startup screen     File location : c:\picture_8(      Use system settings file      Synchronize HMI clock with PC     Delete user-defined startup screen	te download first time. 00-480.bmp	Browse
Runtime     Font files     Necessary if update runtime or executep2      Use user-defined startup screen     File location : c:\picture_8(      Use system settings file      Synchronize HMI clock with PC     Delete user-defined startup screen     Reset recipe	te download first time. 00-480.bmp ( Certificates from project Reset event log Reset data sar	Browse
Runtime     Font files     Necessary if update runtime or executep2      Use user-defined startup screen     File location : c:\picture_80      Use system settings file      Synchronize HMI clock with PC     Delete user-defined startup screen     Reset recipe     Reset recipe	te download first time. 00-480.bmp 00-480.bmp 00-480.bm	Browse mpling able

www.weintek.com