

Q.

How to Replace Battery of MT6050iB2 / MT8050iB2


The MT6050iB2 and MT8050iB2 series take one CR2032 lithium button battery (with wires) to keep the RTC running. Battery specification: CR2032 3V lithium battery.

A.

Steps for battery replacement:

- Step 1.** Turn off the HMI and open its rear cover.
- Step 2.** Unplug the battery wire of the battery ran out.
- Step 3.** Plug the new battery into the motherboard via the white connector.
- Step 4.** Put on the rear cover.
- Step 5.** Reset the RTC time.



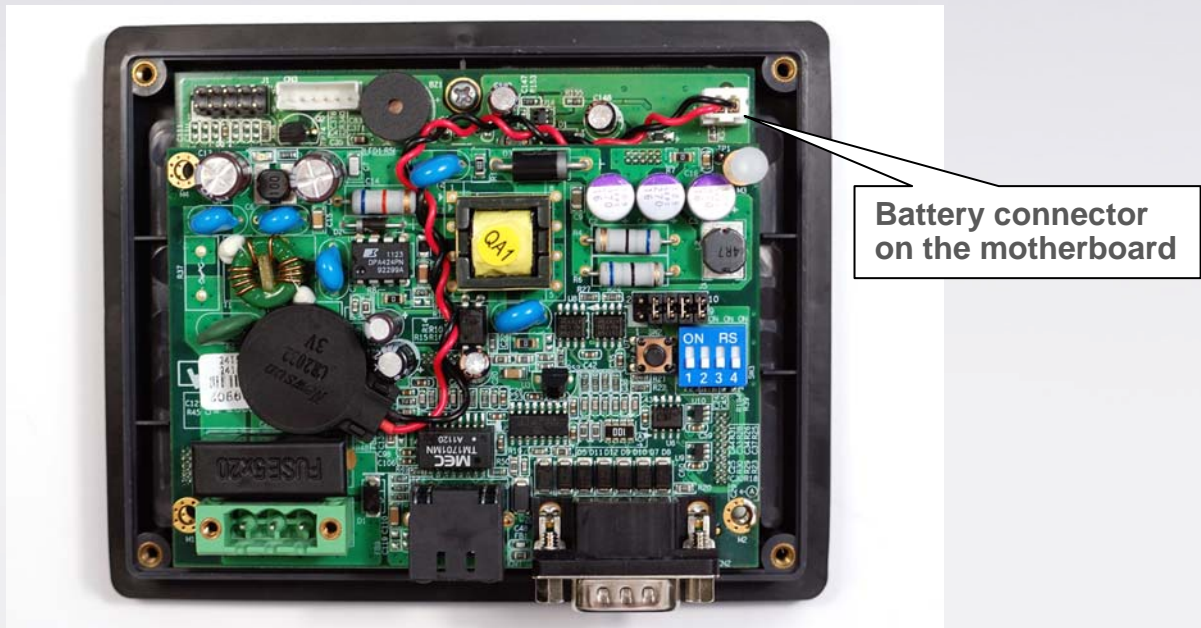

Reading Battery Voltage

EasyBuilder provides LW-9008 (32bit-float): battery voltage for detecting battery voltage. If the value of voltage is lower than 2.8, please replace the battery.