

Q.


## How to set HMI IP on HMI?

This FAQ explains how to view or set HMI IP address on HMI by using System Setting Toolbar.

Applicable Models: eMT, iE, XE, mTV, i Series

Non-applicable Models: cMT Series

A.

**Step 1.** Hit the leftward arrow icon  in the lower-right corner of HMI screen.

**Step 2.** The following four icons open, hit the gear wheel icon.



**Step 3.** Enter password (Default: 111111) to open System Settings dialog box.

System settings				
Network \ Time/Date \ Security \ Time setting \ 10				
<input type="radio"/> Obtain an IP Address Automatically				
<input checked="" type="radio"/> IP address get from below				
IP address:	192	168	1	100
Subnet Mask:	255	255	255	0
GateWay:	192	168	1	254
DNS address:	8	8	8	8
Prev Next Cancel Apply OK ↵				

**Step 4.** In Network tab, two options exist:

[Obtain an IP Address Automatically]: Get IP automatically.

[IP address get from below]: Set IP manually.

Select one of the options and click [Apply] and then click [OK] to save the settings.

**Step 5.** Leave System Settings dialog box, hit the leftward arrow icon again, and then hit the notepad icon to view Network information.

